


ADDITIONAL PERIMETER ATTACHMENT IS REQUIRED OVER INTERMEDIATE PURLIN – ATTACHMENT CAN BE DONE WITH 10" RUSS UNDER THE MEMBRANE OR FASTENERS AND PATCHED THROUGH THE TOP OF THE MEMBRANE

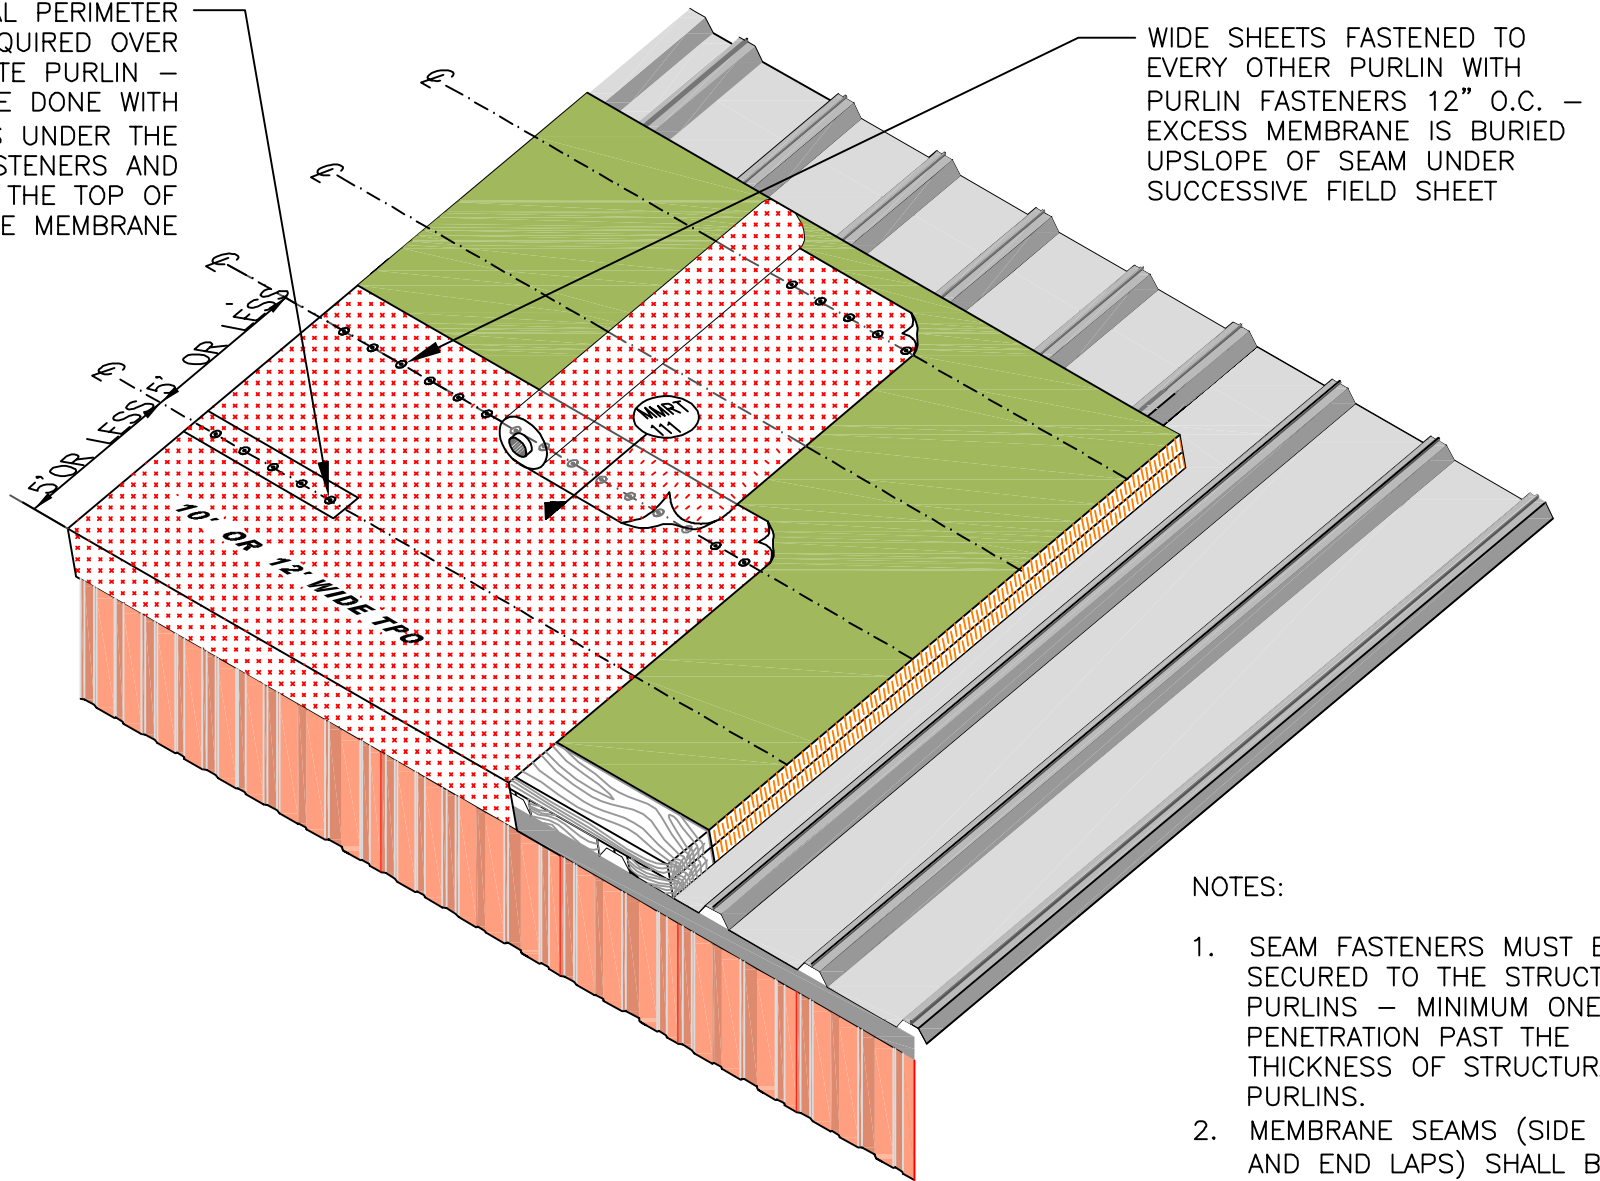

WIDE SHEETS FASTENED TO EVERY OTHER PURLIN WITH PURLIN FASTENERS 12" O.C. – EXCESS MEMBRANE IS BURIED UPSLOPE OF SEAM UNDER SUCCESSIVE FIELD SHEET

NOTES:

1. SEAM FASTENERS MUST BE SECURED TO THE STRUCTURAL PURLINS – MINIMUM ONE INCH PENETRATION PAST THE THICKNESS OF STRUCTURAL PURLINS.
2. MEMBRANE SEAMS (SIDE LAPS AND END LAPS) SHALL BE IN SHINGLED FASHION.

OPTION A: WIDE FIELD SHEETS (10' OR 12' WIDE)

**MULE-HIDE
PRODUCTS CO., INC.
2011**

**100 MPH OR LESS WIND ZONES
WIDE SHEETS WITH SEAMS OVER PURLINS
SYSTEMS:
METAL RETROFIT
TPO MECHANICALLY FASTENED**

**DETAIL NO.:
MMRT-311**