



12' WIDE TPO MEMBRANE

OPTION A: MEMBRANE PERPENDICULAR TO SLOPE

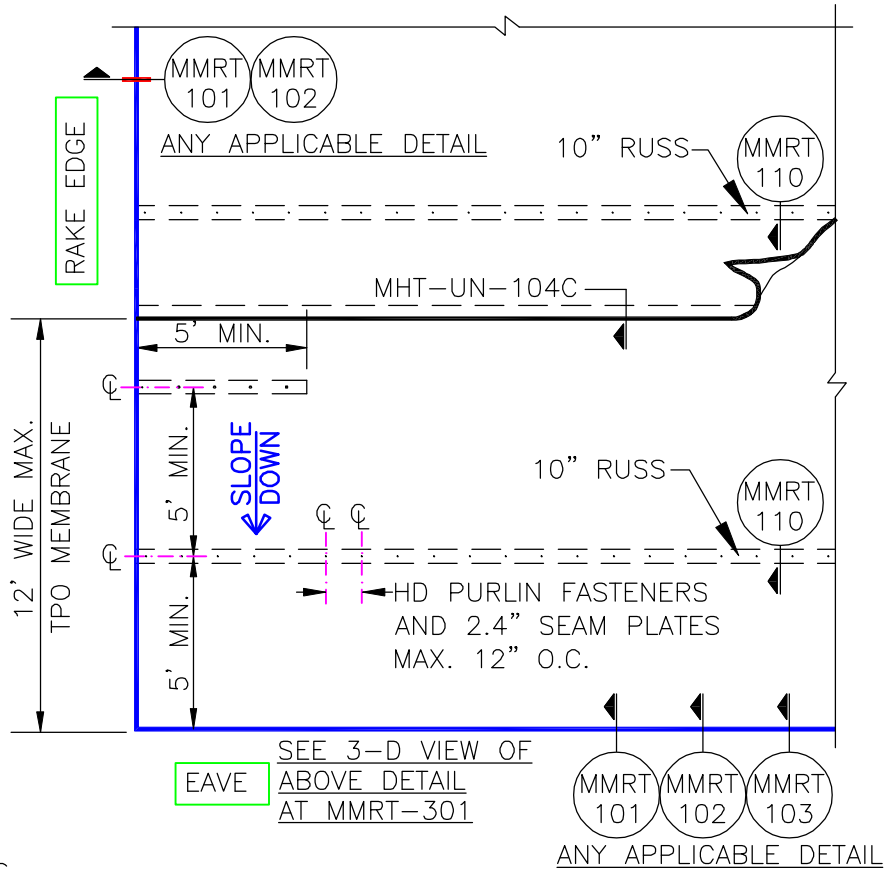

OPTION B: MEMBRANE PARALLEL TO SLOPE

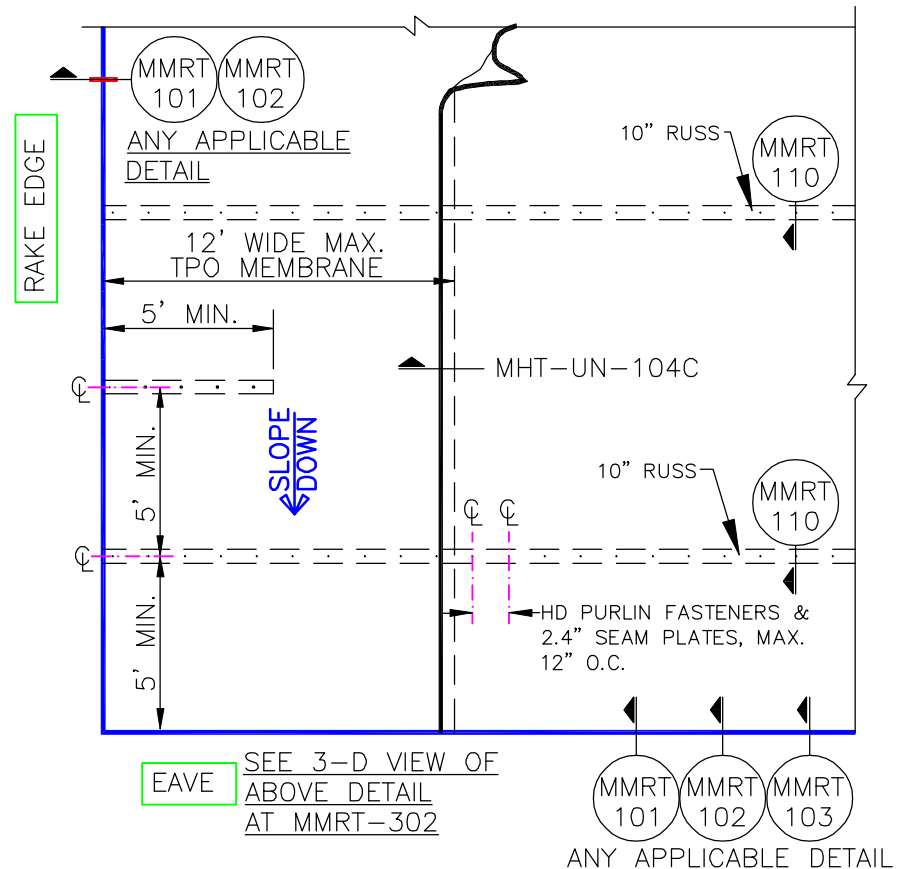

NOTES:

1. WHEN MEMBRANE SHEETS ARE POSITIONED PERPENDICULAR TO THE ROOF SLOPE (OPTION A), ALL FIELD SPLICES MUST BE SHINGLED. MEMBRANE SHEETS MAY ALSO BE POSITIONED PARALLEL TO THE ROOF SLOPE, WHEN ATTACHED TO THE RUSS AS SHOWN IN OPTION B ABOVE.
2. RUSS/MEMBRANE MUST BE SECURED TO THE STRUCTURAL PURLINS WITH HD PURLIN FASTENERS AND 2.4" SEAM PLATES, SPACED A MAXIMUM OF 12 INCHES ON CENTER.

**MULE-HIDE
PRODUCTS CO., INC.
2011**

**100 MPH OR LESS WIND ZONES
MECHANICALLY ATTACHED SYSTEM
SYSTEMS:
METAL RETROFIT
TPO MECHANICALLY ATTACHED**

**DETAIL NO.:
MMRT-300**