



# 12' WIDE TPO MEMBRANE

**OPTION A: MEMBRANE PERPENDICULAR TO SLOPE**

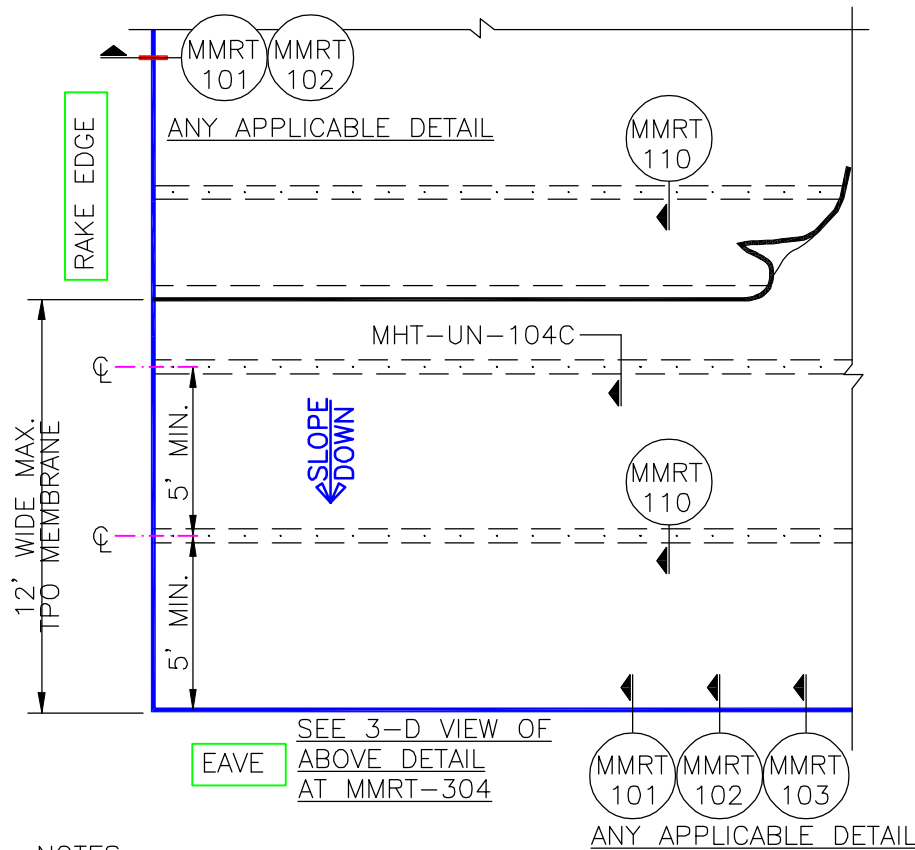

**OPTION B: MEMBRANE PARALLEL TO SLOPE**

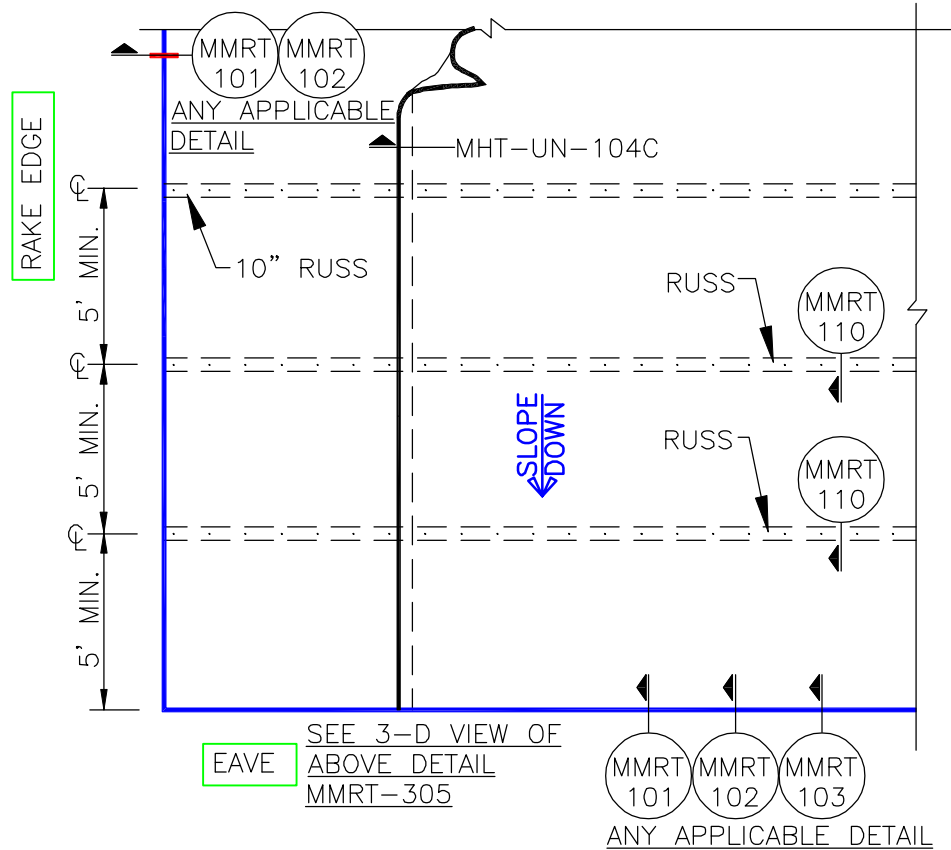

**NOTES:**

1. WHEN MEMBRANE SHEETS ARE POSITIONED PERPENDICULAR TO THE ROOF SLOPE (OPTION A), ALL FIELD SPLICES MUST BE SHINGLED. MEMBRANE SHEETS MAY ALSO BE POSITIONED PARALLEL TO THE ROOF SLOPE, WHEN ATTACHED TO THE RUSS AS SHOWN IN OPTION B ABOVE.

2. RUSS/MEMBRANE MUST BE SECURED TO THE STRUCTURAL PURLINS WITH HD PURLIN FASTENERS AND 2.4" SEAM PLATES, SPACED A MAXIMUM OF 12 INCHES ON CENTER.

**MULE-HIDE  
PRODUCTS CO., INC.  
2011**

**101-120 MPH WIND ZONES  
MECHANICALLY ATTACHED  
SYSTEMS:  
METAL RETROFIT  
TPO MECHANICALLY ATTACHED**

**DETAIL NO.:  
MMRT-303**