


NOTES:

1. FASTEN EXISTING ROOFING SYSTEM AT ALL ANGLE CHANGES OF 2" PER FOOT OR GREATER. CONTACT MULE-HIDE FOR FASTENING CRITERIA AND PROPER FASTENERS FOR EACH DECK TYPE.
2. RUSS PRODUCTS CANNOT BE USED ON FLEECEBACK MEMBRANES.
3. HELIX LOW-RISE ADHESIVE MAY BE USED TO ADHERE FLASHINGS TO WALL. CONTACT MULE-HIDE FOR ADDITIONAL INFORMATION.

ANY STANDARD MULE-HIDE TERMINATION AFTER FLEECE HAS BEEN REMOVED FROM BACK OF MEMBRANE AT TOP OF FLASHING

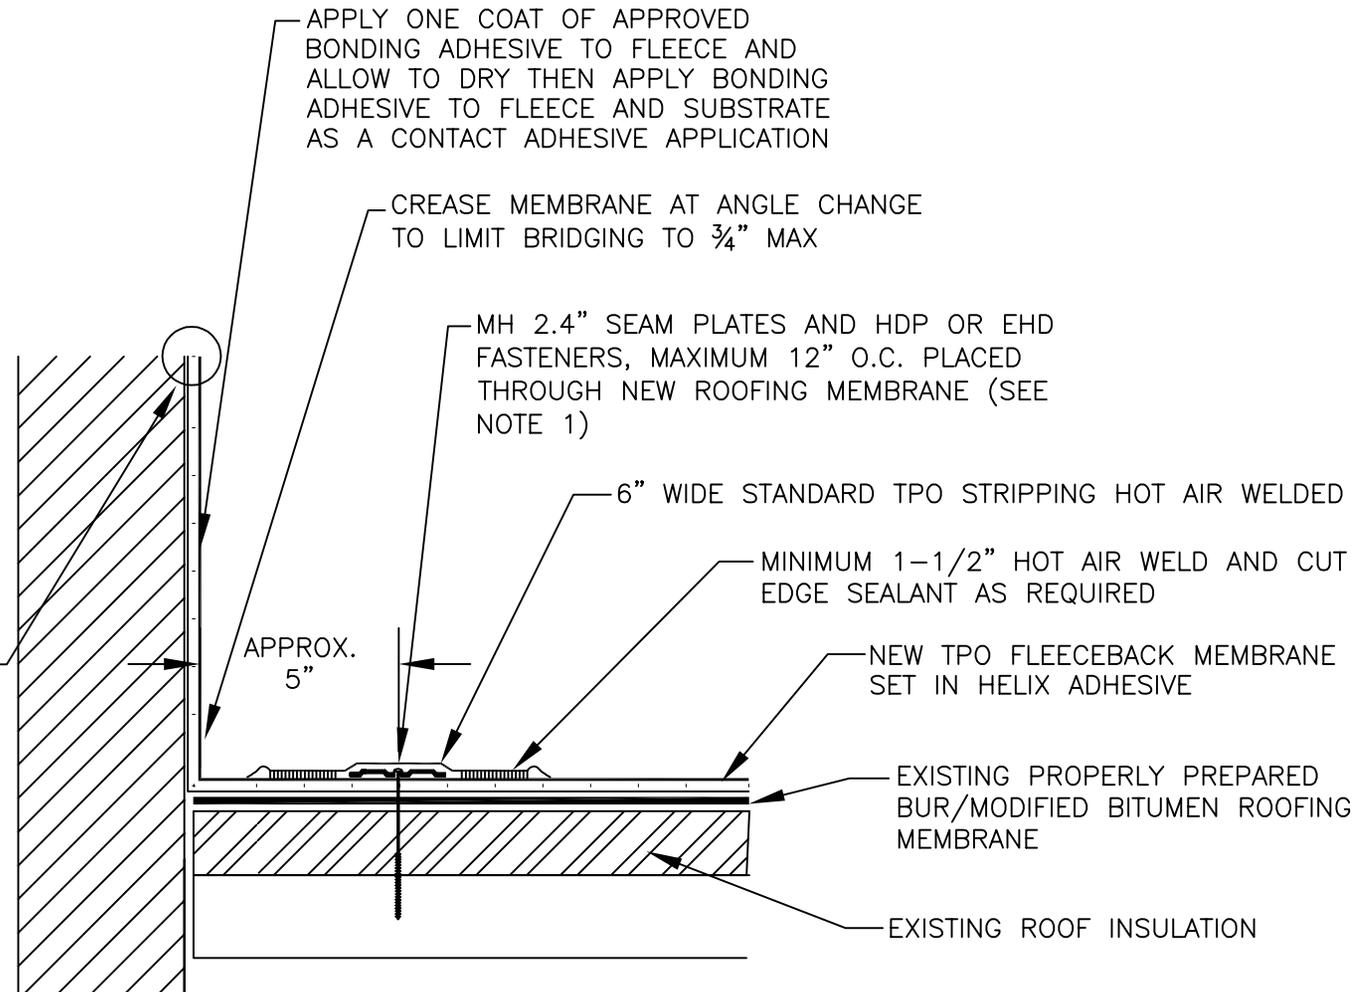

BASE ATTACHMENT

**SYSTEMS:
TPO FLEECE BACK
RECOVER SYSTEMS ONLY**

DETAIL NO.:

MHT-FA-306A

REVISION DATE: 08/2016

**MULE-HIDE
PRODUCTS CO., INC.**