


STEP NO. 1

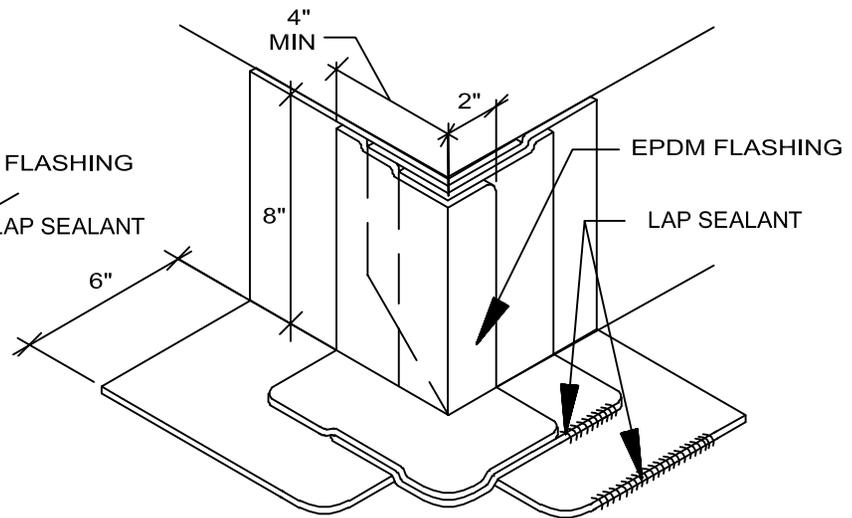

STEP NO. 2

NOTE: WHEN USING UNCURED EPDM FLASHING, SPLICE ADHESIVE AND SEAM CLEANER ARE REQUIRED. WHEN USING FLASHING TAPE, TAPE PRIMER IS REQUIRED TO PREP ALL SURFACES TO WHICH THE FLASHING TAPE WILL BE APPLIED.

**MULE-HIDE
PRODUCTS CO., INC.**
04/01/2004

EPDM
OUTSIDE CORNER

SYSTEMS:
ALL

DETAIL NO.:
MHE-183