


NOTES:

1. REFER TO SPECIFICATIONS FOR FLASHING MEMBRANE REQUIREMENTS.
2. CUT MEMBRANE AND WRAP CORNERS AS SHOWN.
3. INSTALL BOWTIE OR NOTCHED PATCHES AS SHOWN IN INSET TO MAKE CORNERS WATER TIGHT.
4. FLASHING MAY BE CUT FLUSH WITH EDGE OF CURB (AS SHOWN) OR DOUBLE WRAPPED AROUND CORNERS.

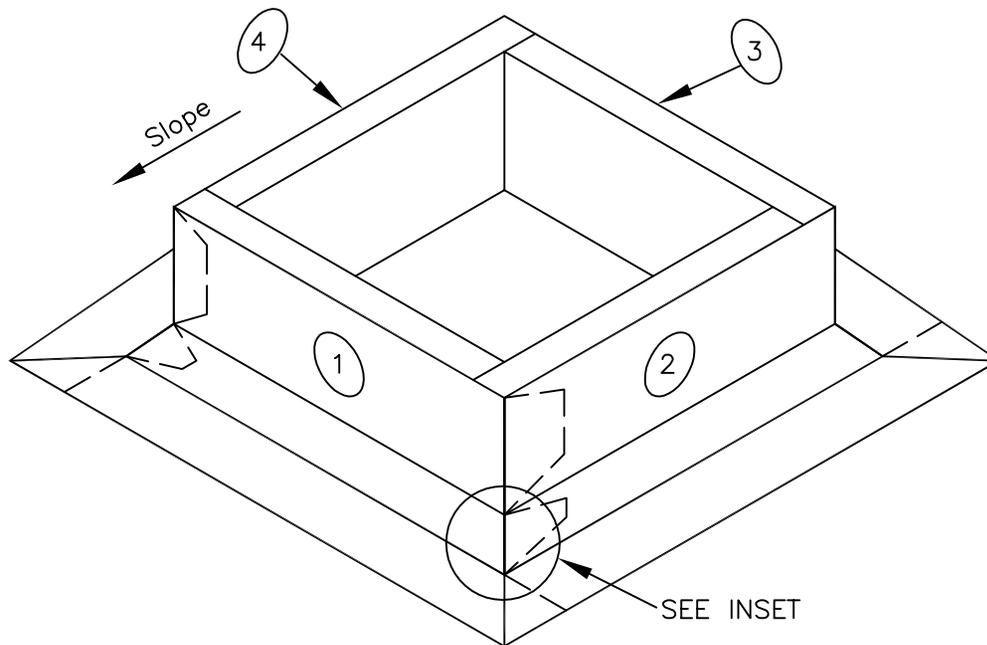

**MULE-HIDE  
PRODUCTS CO., INC.**

**OUTSIDE CORNER  
ISOMETRIC  
SYSTEMS:**

**APP MODIFIED BITUMEN**

**DETAIL NO.:**

**MHMB-UN-CR01T**

REVISION DATE: MARCH 2015