


NOTES:

1. DETAILS TO BE USED IN CONJUNCTION WITH STANDARD GUIDE SPECIFICATIONS CONTAINING REQUIREMENTS FOR NAILERS, INSULATION, SLIPSHEETS, ETC.
2. PVC EDGE SEALANT IS REQUIRED ON ALL CUT OR NON-ENCAPSULATED EDGES OF REINFORCED MEMBRANE. THIS INCLUDES FACTORY CUT MEMBRANE.
3. BEGIN INSTALLATION OF SEAM PLATES 6" TO 9" FROM THE CORNER.
4. POSITION SEAM PLATES 1/2" TO 1" FROM EDGE OF MEMBRANE.
5. REFER TO MULE-HIDE UPLIFT RATINGS FOR APPROPRIATE FASTENER SIZE, AND SPACING.

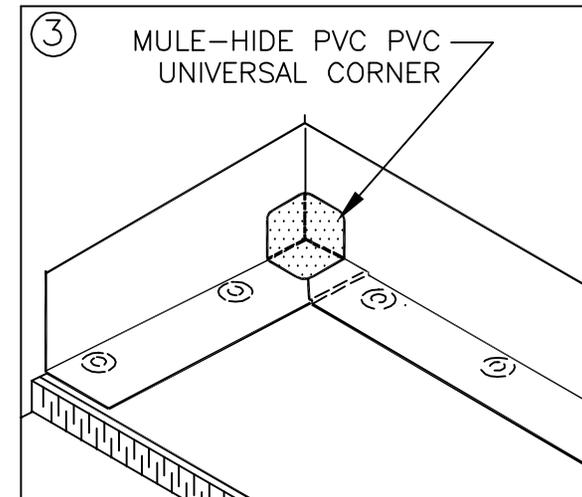

**MULE-HIDE
PRODUCTS CO., INC.
2010**

**PRE-MOLDED
INSIDE CORNER FLASHING
SYSTEMS:
ALL PVC**

**DETAIL NO:
MHP-182**