NOTES;
1. ATTACH WOOD NAILER TO WALL/DECK IN ACCORDANCE WITH FMRC GUIDELINES PER SECTION 1-28, REGARDING WIND LOADS TO ROOF SYSTEMS & DECK SECUREMENT.
2. WOOD BLOCKING MAY BE SLOTTED FOR VENTING OF WET-FILL DECKS OR OTHER APPLICABLE CONSTRUCTIONS.
3. THIS DETAIL SHOULD BE USED ONLY WHERE THE DECK IS SUPPORTED BY THE OUTSIDE WALL.
4. REFER SMACNA RECOMMENDATIONS & DETAILS REGARDING METAL THICKNESS & CLEAT REQUIREMENTS.
5. MEMBRANE ENDLAPS MUST BE 6" MINIMUM & FULLY ADHERED TO THE MEMBRANE I \AT ALL LOCATIONS WHERE "FASTLAP" IS NOT PRESENT.
6. THE M-H NAIL BASE MUST BE INSTALLED AND MECHANICALLY ATTACHED AS THE INITIAL BASE PLY WHEN INSTALLING THE SELF-ADHERING MEMBRANES OVER NON-APPROVED INSULATIONS, COVERBOARDS OR OVERLAYS.

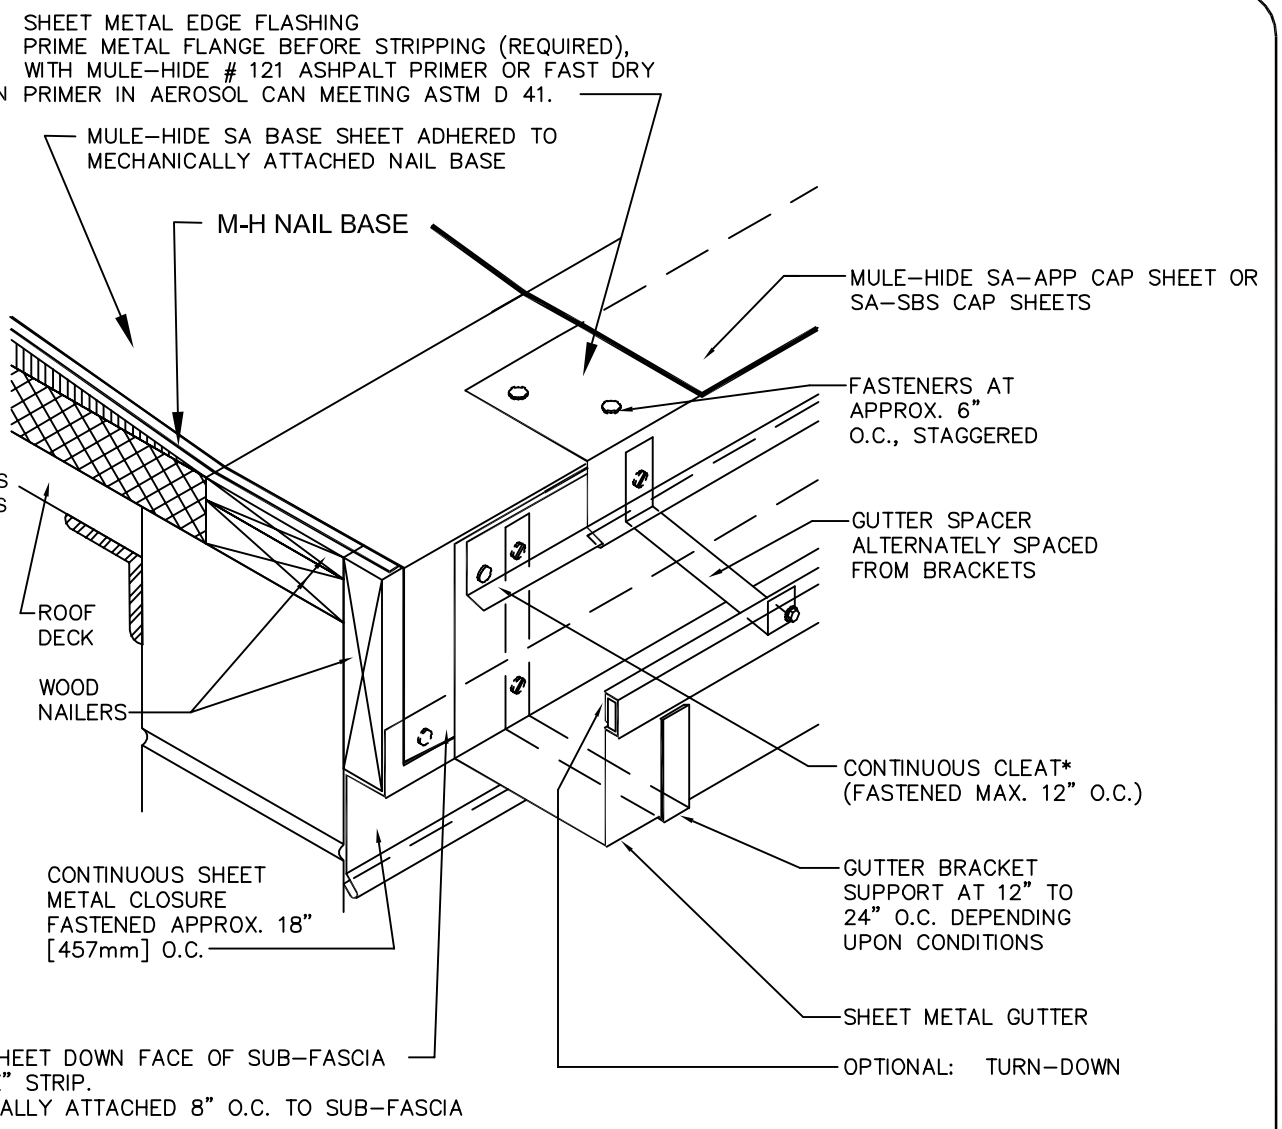

* CONTINUOUS CLEAT IS RECOMMENDED TO BE AT LEAST ONE GAUGE HEAVIER THAN EDGE FLASHING METAL.

MULE-HIDE
PRODUCTS CO.,INC.
2003

GUTTER DETAIL - OPTION 2

SELF-ADHERING MOD BIT SYSTEMS

DETAIL NO.:
MH-MB-G2