


NOTES:

1. REFER TO SPECIFICATIONS FOR FLASHING MEMBRANE REQUIREMENTS
2. WOOD NAILERS MUST BE INSTALLED AROUND DRAIN
3. A TARGET PATCH OF SA BASE MODIFIED BITUMEN IS REQUIRED IF A FIELD SEAM IS WITHIN 6" - 9" OF CLAMPING RING
4. NO SEAM CAN BE LESS THAN 6" FROM THE DRAIN CLAMPING RING

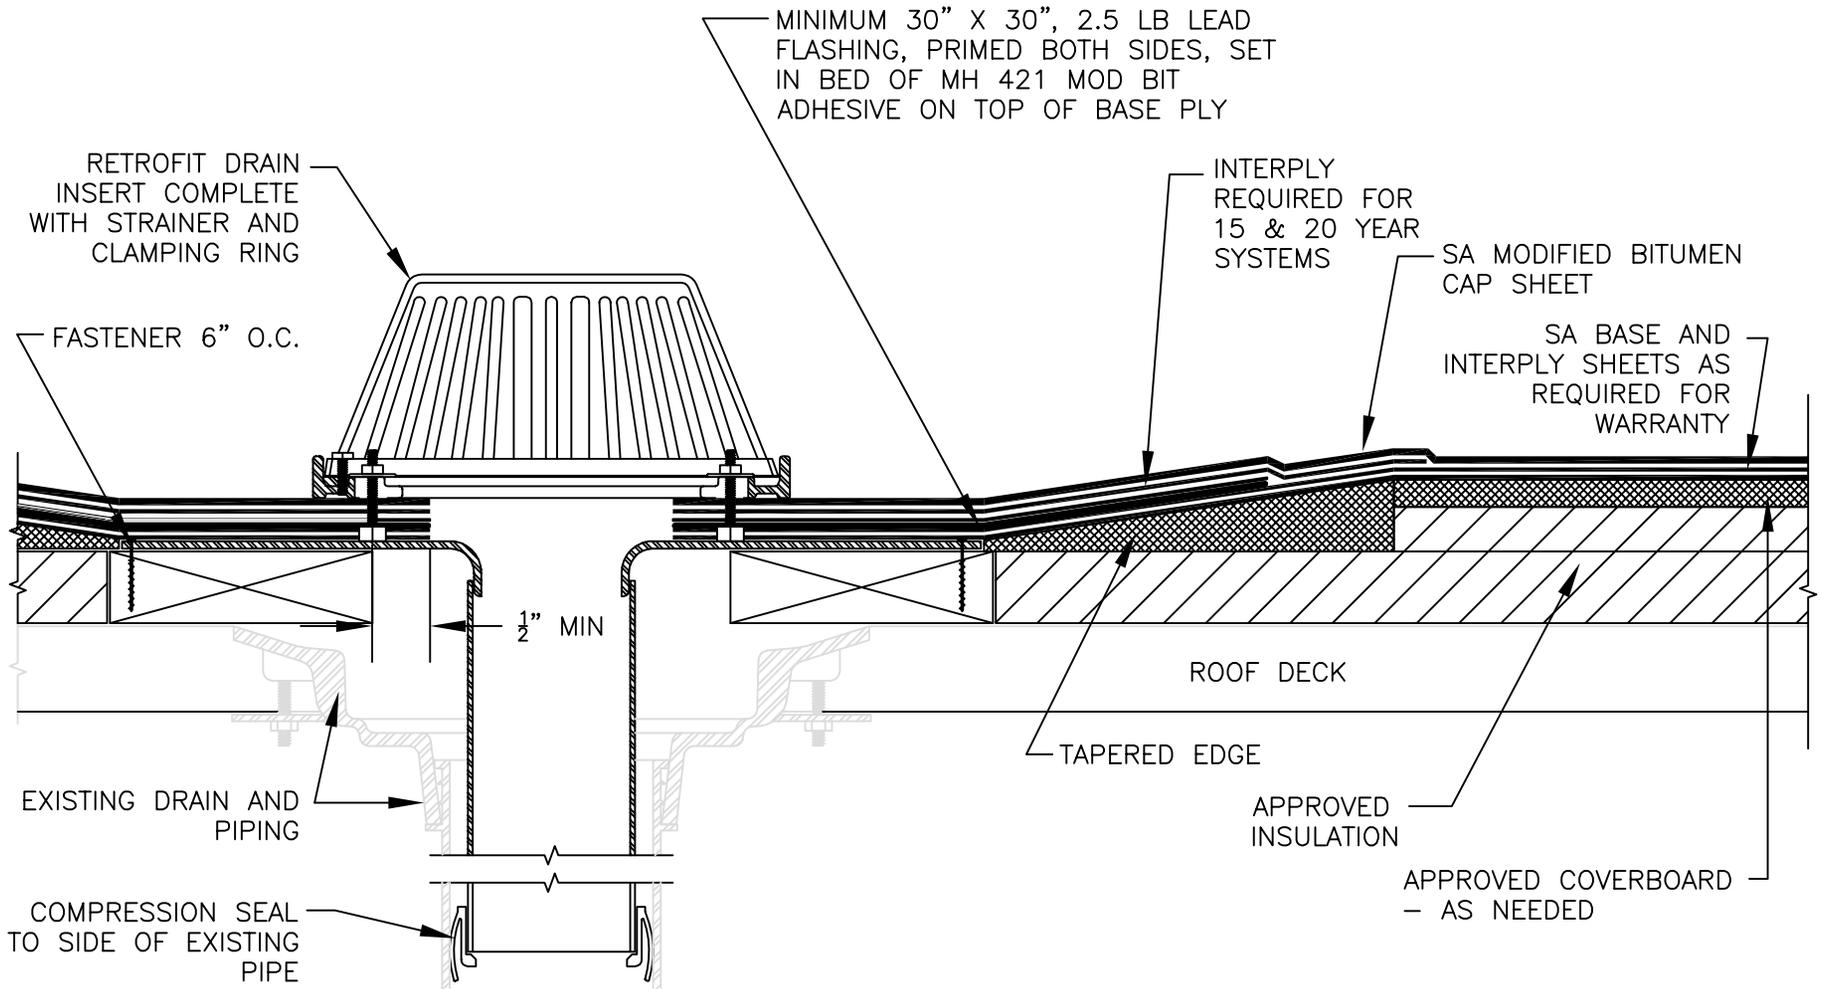

**MULE-HIDE
PRODUCTS CO., INC.**

**RETROFIT
DRAIN INSERT
SYSTEMS:**

SELF-ADHERING MODIFIED BITUMEN

DETAIL NO.:
MH-MB-D2

REVISION DATE: MARCH 2015