
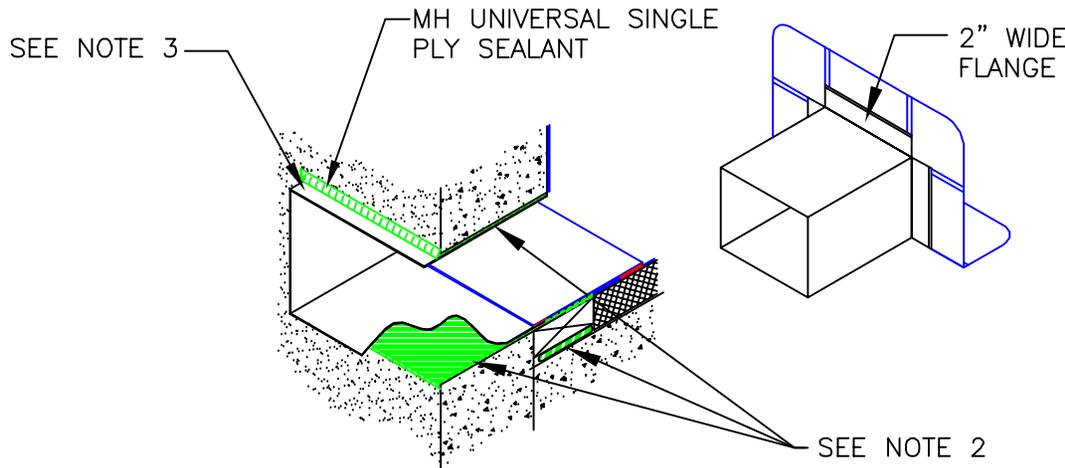


NOTES:

1. BACK-SEAL THE PARAPET FLASHING WITH MH WATER CUT-OFF MASTIC WHERE THE FLANGE IS FASTENED TO THE WALL.
2. APPROVED SEALANT MUST BE APPLIED AROUND THE INTERIOR OF THE SCUPPER BEFORE INSTALLING THE SCUPPER LINER.
3. THIS SINGLE SKIRT SCUPPER CAN BE ORDERED WITHOUT A METAL FLANGE ON THE INSIDE WALL. IN THIS CASE, THE SKIRT MUST BE TERMINATED.
4. SINGLE SKIRT SCUPPER MUST EXTEND 1" BEYOND THE FACE OF THE WALL.
5. USE STAINLESS STEEL FASTENERS WHEN ATTACHING INTO ACQ TREATED WOOD.

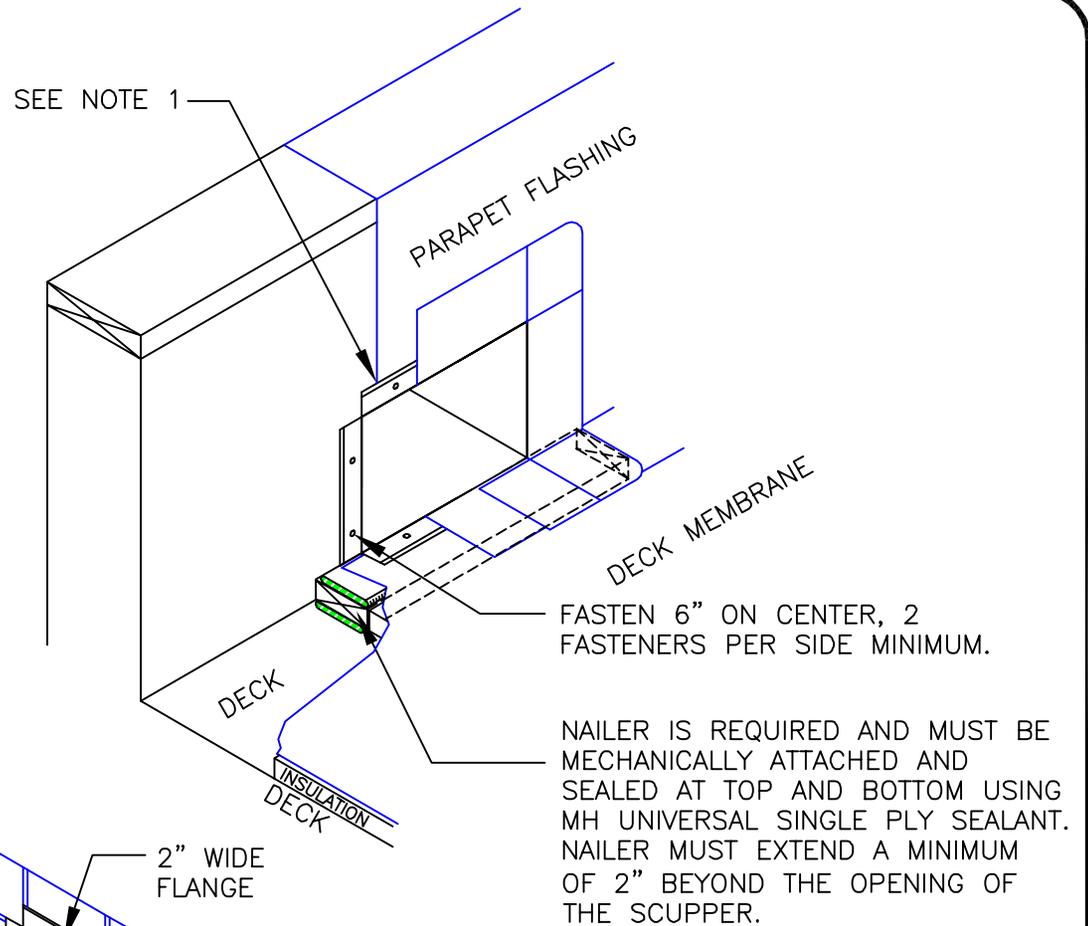

NOTE:
THIS DETAIL QUALIFIES TO BE INCLUDED IN ANY MULE-HIDE LABOR AND MATERIAL WARRANTY

**MULE-HIDE
PRODUCTS CO., INC.**

**MULE-HIDE PREMANUFACTURED
SINGLE SKIRTED SCUPPER DRAINAGE DETAIL
SYSTEMS:
ALL PVC SYSTEMS**

DETAIL NO.:
MHP-2061

REVISION DATE: 01/2013