


**FIELD FASTENING
PATTERN FOR NAIL
BASE**

NOTE: TYPICALLY, CORNERS
REQUIRE 100% INCREASE OF
FASTENERS AND PERIMETERS
REQUIRE 50% INCREASE.

FASTENER PLACEMENT;
12" O.C. @ SEAMS
18" O.C. @ CENTER OF ROLLS

FACTORY MUTUAL APPROVED
FASTENERS AND PLATES

**TYPICAL FM 1-60
ATTACHMENT**

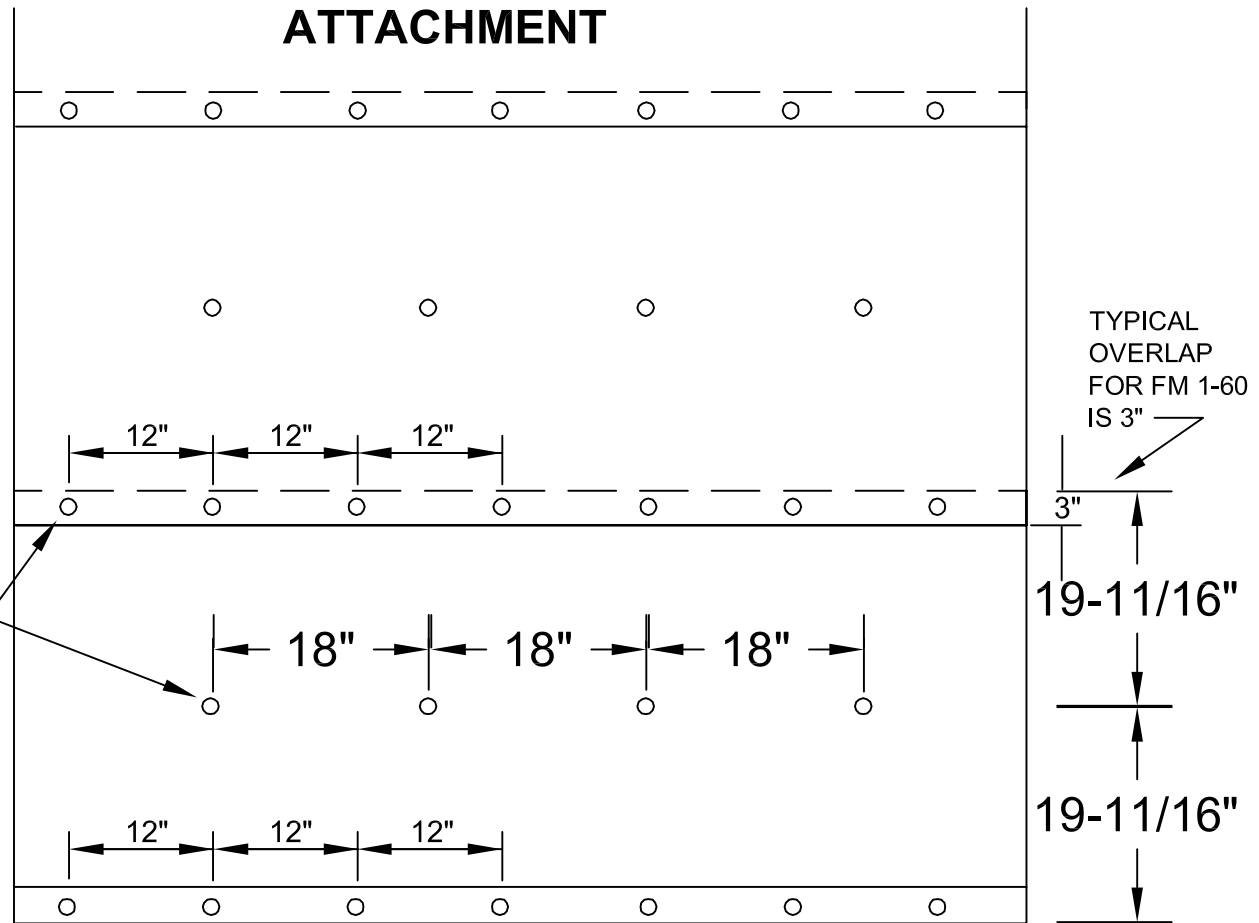

39-3/8" WIDE NAIL BASE ROLLS

**MULE-HIDE
PRODUCTS CO.,INC.
2003**

**NAIL BASE FASTENING PATTERN
SELF-ADHERING MOD BIT SYSTEMS**

**DETAIL NO.:
MH-MB-NB
FM 1-60**