


FIELD FASTENING PATTERN FOR NAIL BASE SHEET

NOTE: TYPICALLY, CORNERS REQUIRE 100% INCREASE OF FASTENERS AND PERIMETERS REQUIRE 50% INCREASE.

FASTENER PLACEMENT:
12" O.C. @ SEAMS
18" O.C. @ FIELD, 2 ROWS
SPACED 12" APART AND FROM SHEET EDGE AND STAGGERED 9"

**FACTORY MUTUAL APPROVED
FASTENERS AND PLATES**

TYPICAL FM 1-90 ATTACHMENT

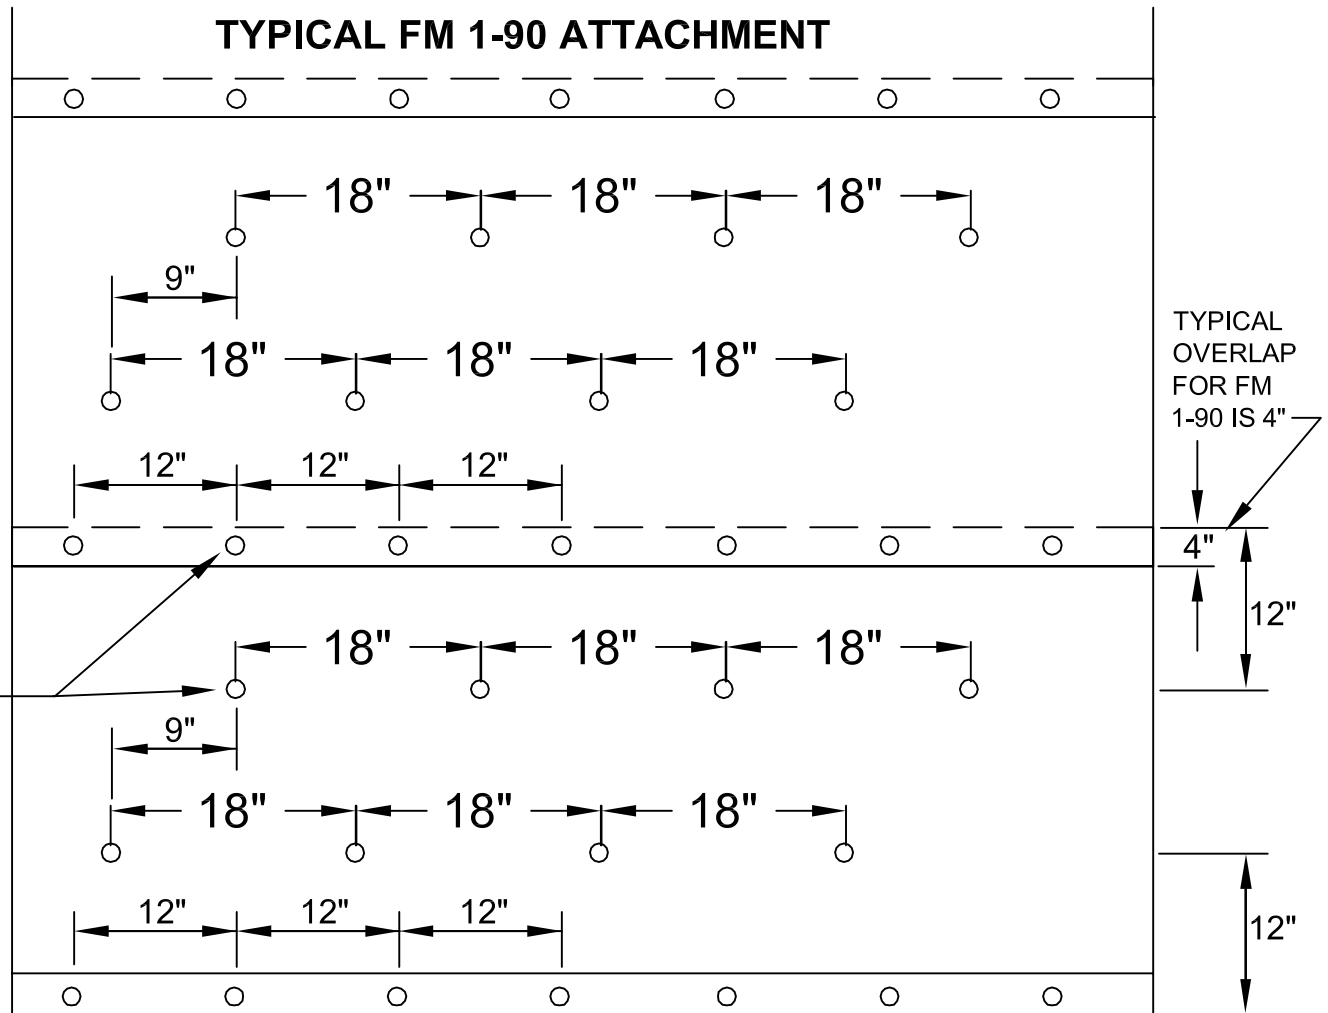

39-3/8" WIDE NAIL BASE ROLLS

**MULE-HIDE
PRODUCTS CO.,INC.
2003**

**NAIL BASE FASTENING PATTERN
SELF-ADHERING MOD BIT SYSTEMS**

**DETAIL NO.:
MH-MB-NB
FM 1-90**