


FASTENING PATTERNS FOR EXTRUDED POLYSTYRENE INSULATION
 FOR USE DIRECTLY UNDER MECHANICALLY ATTACHED WHITE TPO
 REINFORCED MEMBRANE ONLY

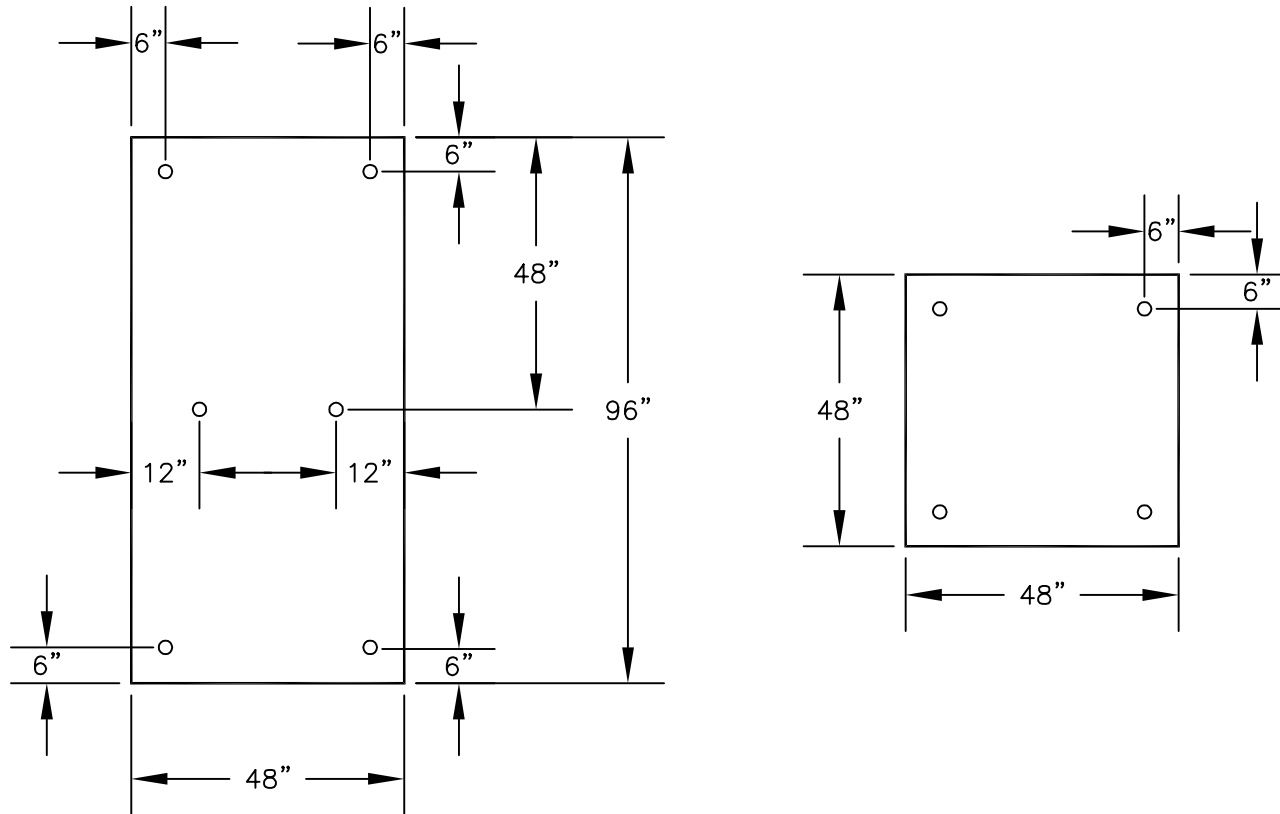

NOTES:

1. MULE-HIDE 3" METAL STRESS PLATES MUST BE USED WITH MULE-HIDE FASTENERS FOR INSULATION ATTACHMENT.
2. FASTENER TOLERANCE SHALL BE ± 1 INCH.

**MULE-HIDE
 PRODUCTS CO., INC.**

**EXTRUDED POLYSTYRENE INSULATION
 ATTACHMENT FASTENING PATTERNS
 SYSTEMS:
 MECHANICALLY ATTACHED**

DETAIL NO.:
MHT-MA-700
 REVISION DATE: 10/2013