



2" OR THICKER POLYISOCYANURATE
INSULATION ONLY

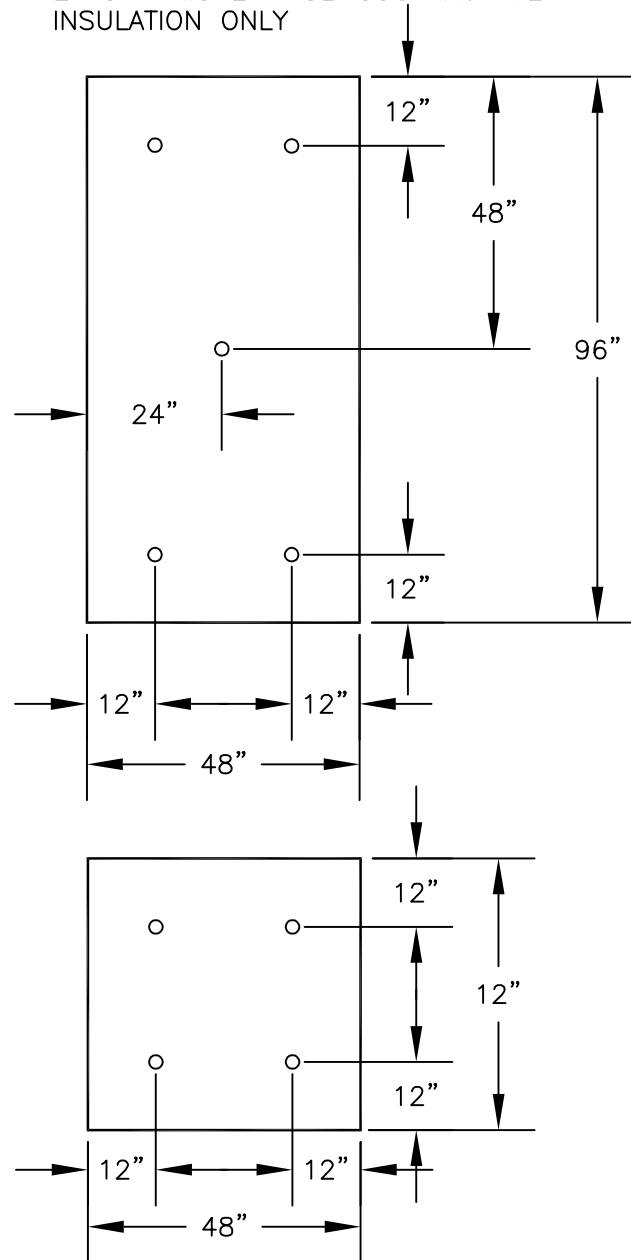

ALL OTHER INSULATIONS

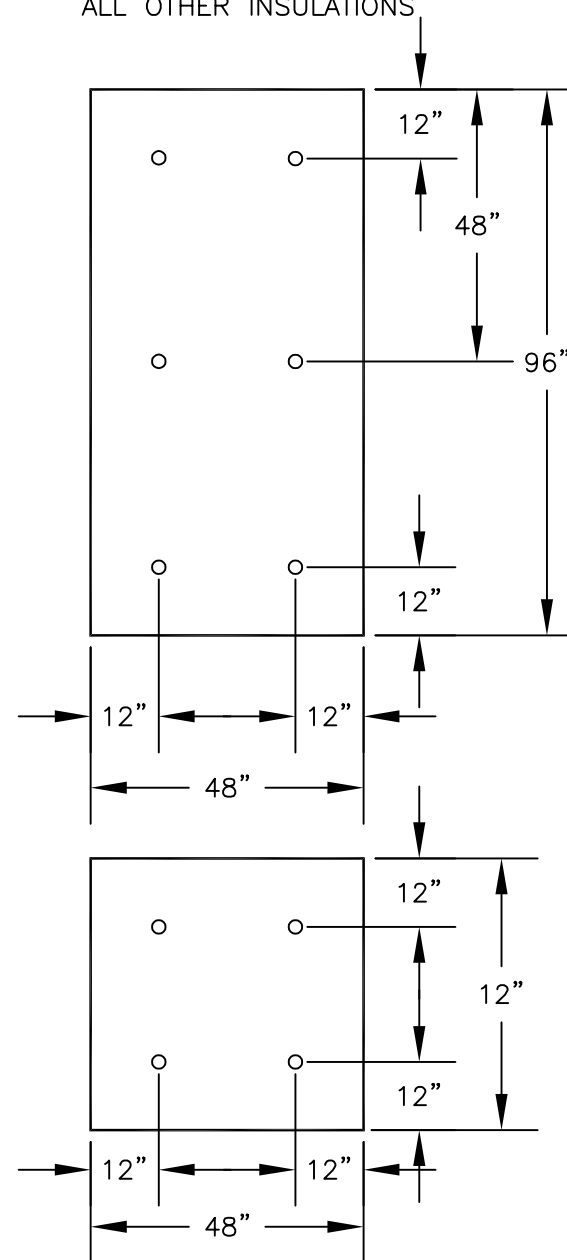

NOTES:

1. MULE-HIDE 3" METAL STRESS PLATES MUST BE USED WITH MULE-HIDE FASTENERS FOR INSULATION ATTACHMENT.
2. FASTENER TOLERANCE SHALL BE +1 INCH.

**MULE-HIDE
PRODUCTS CO., INC.**

INSULATION ATTACHMENT PATTERNS

SYSTEMS:

MECHANICALLY ATTACHED

DETAIL NO.:

MHT-MA-701

REVISION DATE: 10/2013