


NOTES:

1. DETAILS TO BE USED IN CONJUNCTION WITH STANDARD GUIDE SPECIFICATIONS CONTAINING REQUIREMENTS FOR NAILERS, INSULATION, SLIPSHEETS, ETC.
2. PVC EDGE SEALANT IS REQUIRED ON ALL CUT EDGES OR NON-ENCAPSULATED EDGES OF REINFORCED MEMBRANE. THIS INCLUDES FACTORY CUT MEMBRANE.
3. SPECIFIER/APPLICATOR MUST DETERMINE APPROPRIATE EQUIPMENT SUPPORT TO BE USED.
4. WHEN UTILIZING MULE-HIDE PVC MEMBRANE, THE ROOFING SHEET MAY BE ATTACHED WITH APPROVED FASTENERS AND PLATES AS A BASE TIE-IN. SEE DETAIL MHP-120

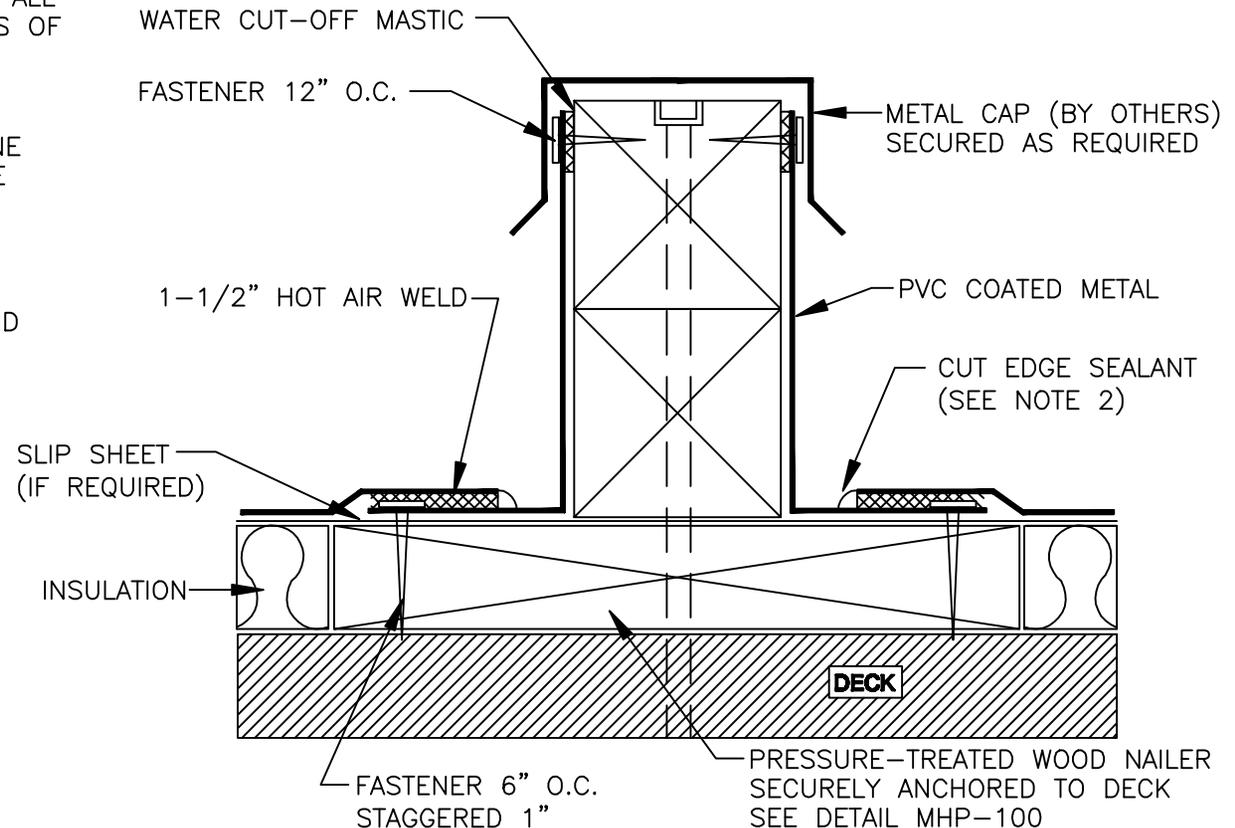

**MULE-HIDE
PRODUCTS CO., INC.
04/01/2007**

**SLEEPER SUPPORT (HEAVY WEIGHT)
SYSTEMS:
ALL PVC**

**DETAIL NO:
MHP-192**