
NOTES:

- ALL JOINTS ARE TO BE SEALED WITH AN APPROVED SEALANT
- 2. SPLICE CLEATS ARE INSTALLED 24" ON CENTER USING FOUR APPROVED FASTENERS.
- 3. EDGES PRE-NOTCHED FOR AN OVERLAPPED JOINT.
- 4. COPING WIDER THAN 16" REQUIRES ADDITIONAL TOP FASTENERS.
- 5. INSTALL 4" WIDE SPLICE CLEATS 24" ON CENTER USING FOUR APPROVED FASTENERS (MUST POSITION A CLEAT AT EACH JOINT).
- 6. WHEN MORE THAN ONE ARCHED COPING CAP IS USED, INSTALL THE CAP TO SHED WATER DOWN THE ARCH BY CENTERING ONE SECTION AT THE TOP OF THE ARCH.
- 7. ADDITIONAL ARCHED COPING SECTIONS ARE PRE-NOTCHED TO PROVIDE AN OVERLAPPED JOINT. APPLY AN APPROVED SEALANT AT ALL COPING JOINTS.
- 8. COPING 16" TO 24" WIDE WILL REQUIRE A ROW OF HEX-HEAD SCREWS WITH NEOPRENE WASHERS IN THE CENTER.
- 9. COPING 25" OR WIDER SHALL REQUIRE TWO ROWS OF HEX-HEAD SCREWS WITH NEOPRENE WASHERS. ALL FASTENERS SHALL BE INSTALLED AT 18" ON CENTER ALONG THE LENGTH OF THE COPING.
- 10. MUST USE STAINLESS STEEL FASTENERS IF FASTENING INTO ACQ TREATED WOOD

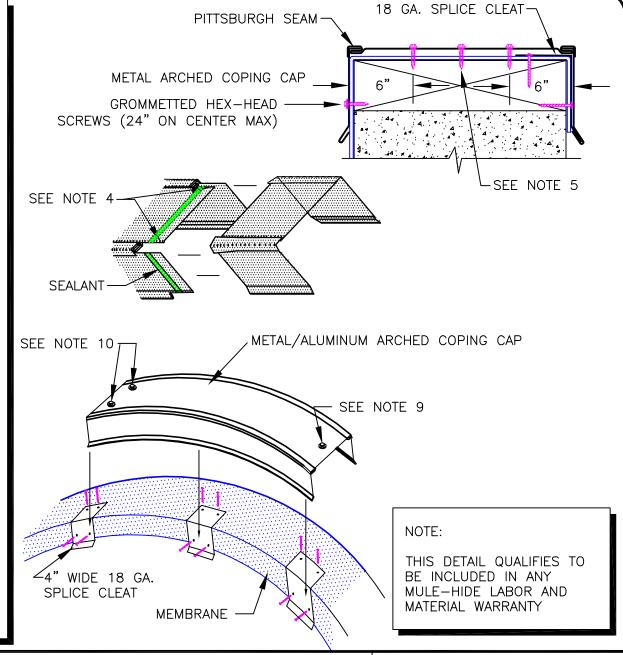

MULE-HIDE PRODUCTS CO., INC.

MULE-HIDE PREMANUFACTURED ARCHED COPING W/SPLICE PLATE SYSTEMS:

ALL MULE-HIDE SYSTEMS

DETAIL NO.:

MHSM-6056

REVISION DATE: 01/2013