


# PARAPET WALL FLASHING REGLET TERMINATION

TOP OF FLASHINGS MUST BE MECHANICALLY TERMINATED. SELF-ADHERING MOD BIT FLASHINGS MUST BE FASTENED WITH APPROPRIATE FASTENERS SPACED A MAXIMUM OF 8" ON CENTER. THE FASTENERS MUST PENETRATE AND ANCHOR INTO THE STRUCTURAL WALL (CONCRETE, WOOD, BLOCK, ETC.)

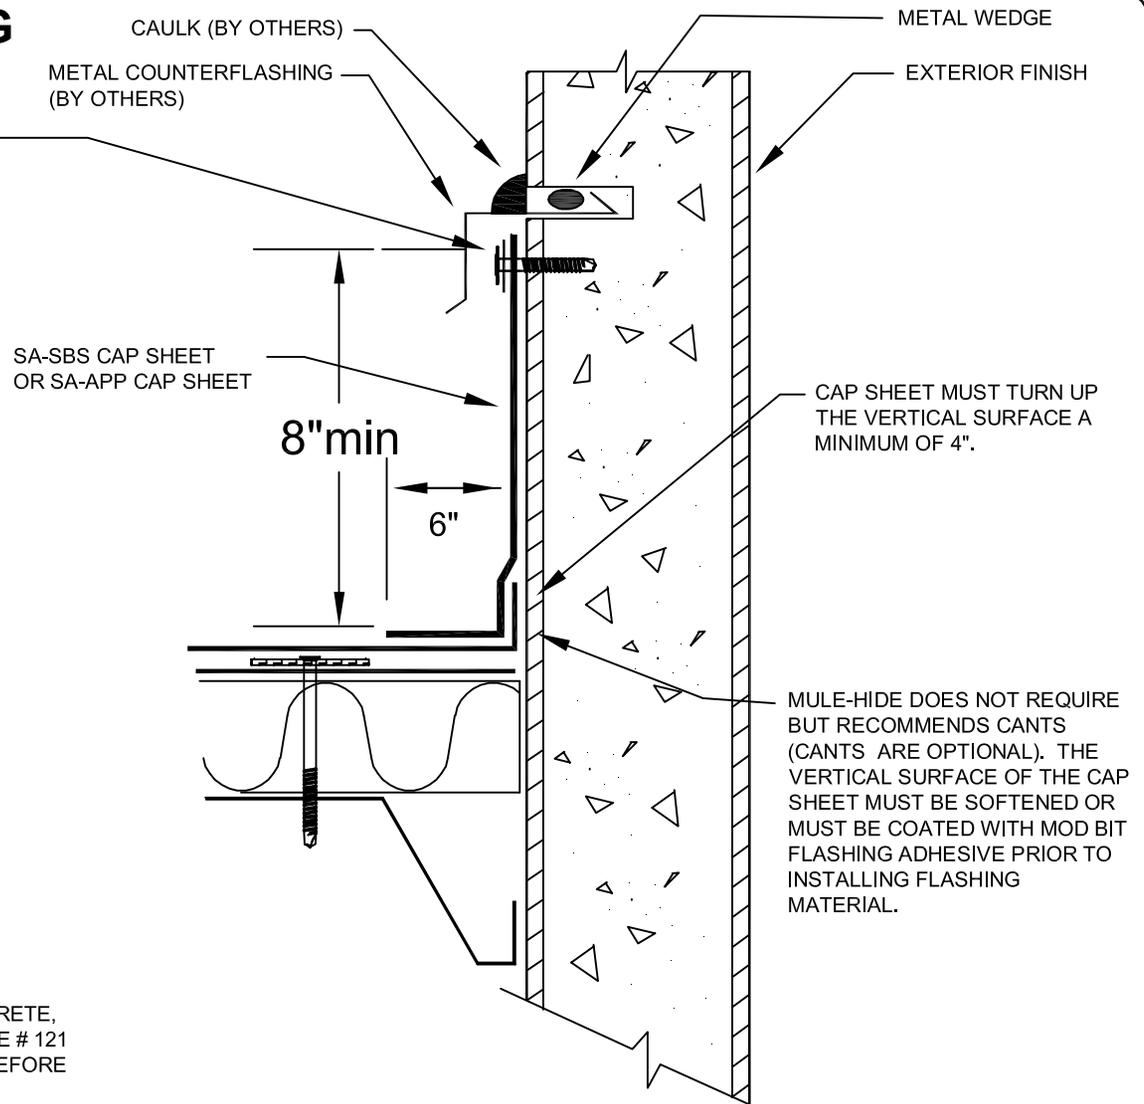

**NOTES:**

1. VERTICAL SURFACES SUCH AS MASONRY, STUCCO, CONCRETE, AGED WOOD OR METAL SHALL BE PRIMED WITH MULE-HIDE # 121 ASPHALT PRIMER. PRIMER MUST BE THOROUGHLY DRY BEFORE APPLICATION OF SELF-ADHERING MEMBRANES.

**MULE-HIDE  
PRODUCTS CO.,INC.  
2003**

**WALL FLASHING TERMINATION - 4**

**SELF-ADHERING MOD BIT SYSTEMS**

**DETAIL NO.:  
MH-MB-WFT04**